



## Video 8: Adding and deleting content on the player

This can be done in both the child and adult mode

To get into adult mode, click on the blue 'Mode' button underneath the Bookshelf panel and enter your password.

### Deleting Tracks

- To delete a track from a player, the player must be connected to the Base Unit and selected in the players panel of the StoryPhones software.
- Select the track that you want to delete and then click the green 'Waste bin' button beneath the players panel. You will be asked to confirm the deletion. Click 'Ok'. Remember that this does not delete the file from your BookShelf library, only the player.

### Adding Content

- First select a player in the players panel.
- Now find the file that you wish to copy to the player and highlight it in the Book-Shelf panel.
- You can now drag and drop the file onto the players panel or just click the yellow 'Transfer' button.
- You can add more than one track to the copy list in the player panel.
- When you have completed your file list, click on the large blue 'Copy' button below the players panel and the files will be copied across to the player. **Do not remove the player from the Base Unit until the copying is complete as this may corrupt the player.**
- The mouse icon or a progress bar will indicate when the copying is complete.

If you would like more advice, please phone our free customer support line on **0845 652 0907**