



Video 10: Different Modes and Functions

Modes and Functions

- When you first receive your system the players are set up in what we call normal mode.
- You can set your Headsets or Remote Console into different modes. You and the children can use them in various ways such as independent listening or group listening.
- To change the operating mode, open the StoryPhones software by clicking the icon. You need to be in adult mode so just click the blue 'Mode' button and enter your password.
- Click on the red 'Settings' button to open up the settings window.
- Each player has three modes to choose from. Normal mode, Automatic Play Control Mode and Remote Control Mode.
- You can also choose which headset buttons the children can operate and select between *Continuous* and *Play Single Track* mode.
- There is more on each of these settings in other videos.

*If you would like more advice, please phone our free customer support line on **0845 652 0907***