



Video 11: Using the Headset in Normal Mode

Normal Mode

- Normal mode allows the children to access all of the function buttons on a player, including skip track, play/pause and volume.
- To change any of the settings on the Headset you need to open the Settings windows in the StoryPhones software.
- You can choose different ways of playing tracks. If you choose *Continuous Play* then all tracks on the player will automatically play, one after the other.
- If you choose *Play Single Track* then the player will pause after each track until the 'Play' button is pressed again. This is very useful for treasure hunts and listen-and-do activities.
- The Buttons Mode setting allows you to choose what control the children have over the buttons on the player. You can choose to stop the child from skipping or pausing a track or from adjusting the volume.
- You can change these settings for individual headsets or you can choose All StoryPhones from the drop-down list in the settings window. This will apply the settings to all of the players that are connected to Base Unit.
- When you have changed a setting, click the 'Save' button to save the settings for that player before moving on to another player or leaving the settings window.

If you would like more advice, please phone our free customer support line on **0845 652 0907**